


DIPSWITCH SETTINGS FOR VOLTAGE & WATERING TIMES

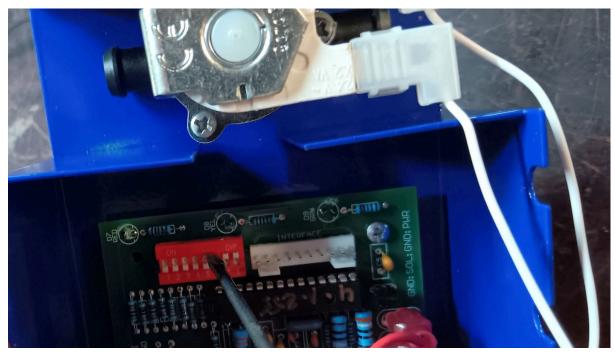

0 = Switch in off position (down)1 = Switch in on position (up)

Dipswitches 1 to 4 control Voltage

S 1	S2	S 3	S4	VOLTAGE
0	0	0	0	12
0	0	1	1	24
0	1	0	1	36
1	0	0	0	48
1	1	0	1	72
1	1	1	1	80





Dipswitches 4 to 8 control Watering Time

Formulas to calculate the watering time interval (round up to next interval):

12 Cell (24V) Batteries: Time in seconds = 0.025 x AHr rating of battery. **18 Cell (36V) Batteries:** Time in seconds = 0.04 x AHr rating of battery. **24 Cell (48V) Batteries:** Time in seconds = 0.05 x AHr rating of battery.

Calculation is based on a flow rate of 1.5 litres per minute at the coupling.

S 5	S6	S 7	S8	TIME
0	0	0	0	20 sec
0	0	0	1	40 sec
0	0	1	0	1 min
0	0	1	1	1 min 20 sec
0	1	0	0	1 min 40 sec
0	1	0	1	2 min
0	1	1	0	2 min 20 sec
0	1	1	1	2 min 40 sec
1	0	0	0	3 min
1	0	0	1	3 min 20 sec
1	0	1	0	3 min 40 sec
1	0	1	1	4 min
1	1	0	0	4 min 20 sec
1	1	0	1	4 min 40 sec
1	1	1	0	5 min
1	1	1	1	CALIBRATION

